



FPC

PRESSURE FILTERS

DESCRIPTION

High pressure inline filter

MATERIALS

Head: Cast iron

Bowl: Steel

Bypass valve: Steel

Seals: NBR Nitrile (FKM Fluoroelastomer on request)

Indicator housing: Brass

PRESSURE

Max. working: 35 MPa (350 bar)

Collapse, differential for the filter element: 2 MPa (20 bar)

BYPASS VALVE

Setting: 600 kPa (6 bar) $\pm$ 10%

FLOW RATE

Qmax 150 l/min

WORKING TEMPERATURE

From -25° to +110° C

COMPATIBILITY (ISO 2943)


Full with fluids: HH-HL-HM-HV-HTG

(according to ISO 6743/4)

For fluids different than the above mentioned,
please contact our Customer Service



HYDRAULIC DIAGRAM

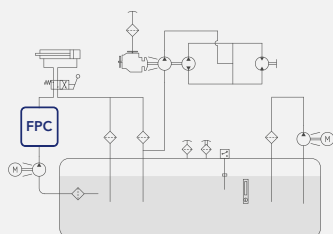

Is this datasheet the latest release? Please check on our website




ORDERING AND OPTION CHART

F	P	C	COMPLETE FILTER FAMILY				FILTER ELEMENT FAMILY	E	P	C
			SIZE & LENGTH	51	53	55	SIZE & LENGTH			
			PORT TYPE							
			B = BSP thread	B	B	B				
			M = Metric thread (only M22x1,5)	M	M	M				
			PORT SIZE							
			04 = 1/2"	04	04	04				
			06 = 3/4"	06	06	06				
			08 = 1"	08	08	08				
			BYPASS VALVE							
			W = without	W	W	W				
			C = 600 kPa (6 bar)	C	C	C				
			SEALS				SEALS			
			N = NBR Nitrile	N	N	N				
			F = FKM Fluoroelastomer	F	F	F				
			G = Treatment for water-glycol	G	G	G				
			FormulaUFI MEDIA				FormulaUFI MEDIA			
			CC = FormulaUFI.CELL 10 µm β>2	CC	CC	CC				
			CD = FormulaUFI.CELL 25 µm β>2	CD	CD	CD				
			FA = FormulaUFI.MICRON 5 µm(c) >1.000 Δp 2MPa (20 bar)	FA	FA	FA				
			FB = FormulaUFI.MICRON 7 µm(c) >1.000 Δp 2MPa (20 bar)	FB	FB	FB				
			FC = FormulaUFI.MICRON 12 µm(c) >1.000 Δp 2MPa (20 bar)	FC	FC	FC				
			FS = FormulaUFI.MICRON 16 µm(c) >1.000 Δp 2MPa (20 bar)	FS	FS	FS				
			FD = FormulaUFI.MICRON 21 µm(c) >1.000 Δp 2MPa (20 bar)	FD	FD	FD				
			FE = FormulaUFI.MICRON 30 µm(c) >1.000 Δp 2MPa (20 bar)	FE	FE	FE				
			CLOGGING INDICATOR**							
			03 = port, plugged	03	03	03				
			5E = visual differential 500 kPa (5 bar)	5E	5E	5E				
			6E = electrical differential 500 kPa (5 bar)	6E	6E	6E				
			7E = indicator 6E with LED	7E	7E	7E				
			XE = electrical differential N.O. 500 kPa (5 bar)	XE	XE	XE				
			T2 = elect. diff. 500 kPa (5 bar) with thermostat 30°C	T2	T2	T2				
			ACCESSORI / ACCESSORIES							
			A = lateral indicator port (see DWG, only B08 version)	A	A	A				
			C = indicator port on the top (see DWG)	C	C	C				
			X = no accessory available	X	X	X				

**When the filter is ordered with FKM seals, the first digit of the indicator code is a letter (please see Clogging Indicator Chapter for further details)

SPARE PARTS

FILTER HOUSING	FILTER ELEMENT	CLOGGING INDICATOR
		
B P C	E P C	


FPC

PRESSURE FILTERS

SPARE SEAL KIT

	NBR	FKM
FPC51-53-55	521.0131.2	521.0132.2

INSTALLATION DRAWING

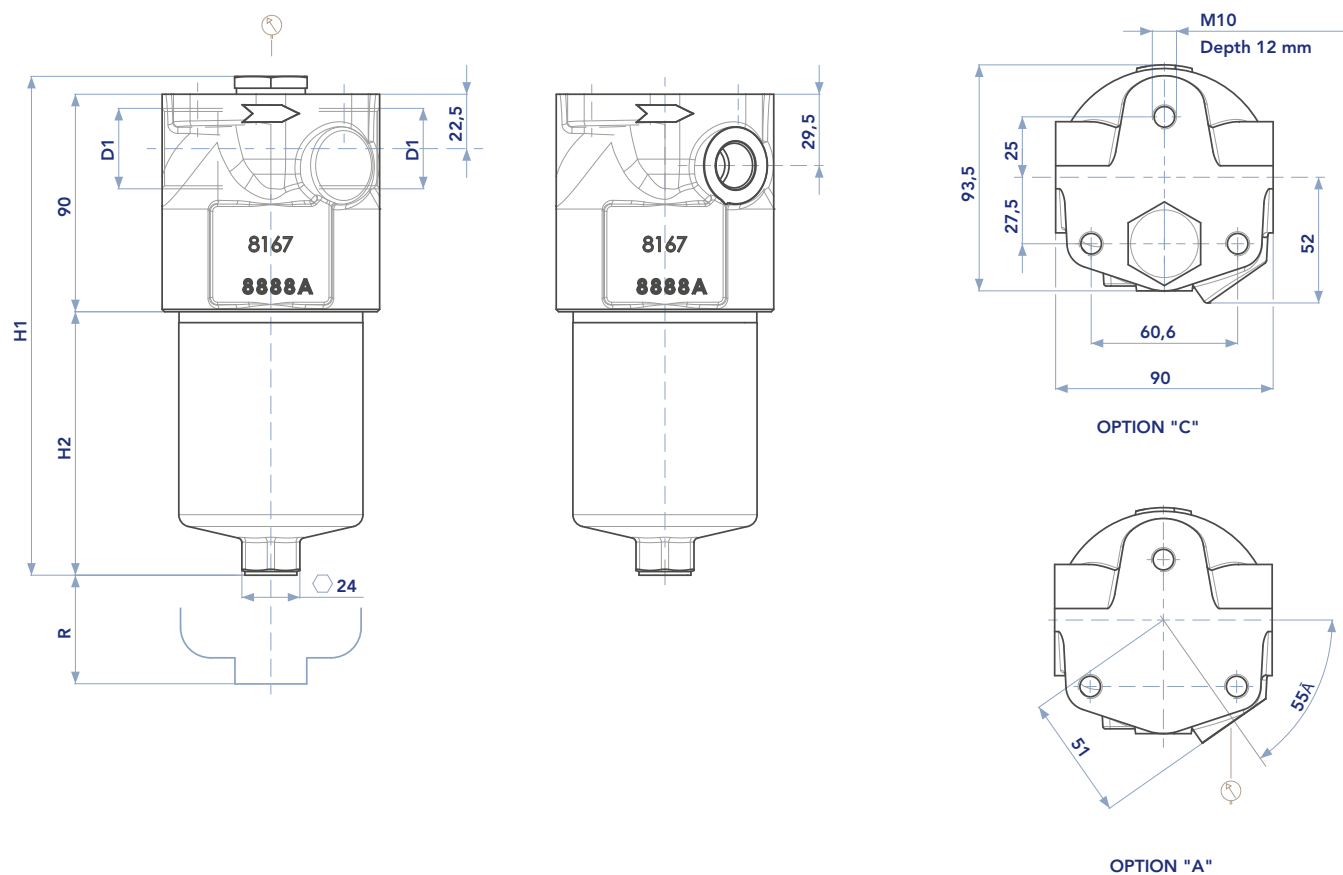

FILTER HOUSING


	D1	H1	H2	Kg
FPC51	M22x1,5 - 1/2" - 3/4" - 1" BSP	206,5	109,0	4,2
FPC53	M22x1,5 - 1/2" - 3/4" - 1" BSP	254,5	157,0	4,7
FPC55	M22x1,5 - 1/2" - 3/4" - 1" BSP	307,0	209,5	5,3

FPC

PRESSURE FILTERS


FILTER ELEMENT

	A	B	C	Kg	AREA (cm ²)	
					Media F+	Media C+
EPC51	56,5	27	118	0,12	945	1.045
EPC53	56,5	27	166	0,15	1.401	1.549
EPC55	56,5	27	219	0,19	1.905	2.105

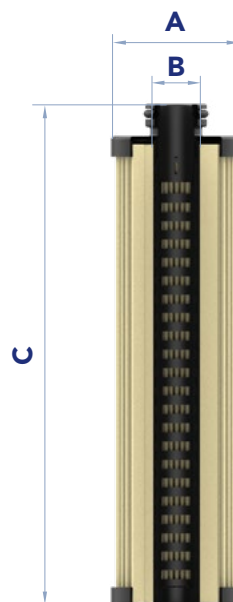

MAINTENANCE

- 1) Stop the system and verify there is no pressure in the filter.
- 2) Collect the oil inside the filter with a suitable container.
- 3) Unscrew the bowl (1) and clean it.
- 4) Remove the dirty filter element (2).
N.B. The used filter elements and oil dirty filter parts dirty are classified "Dangerous waste material" and must be disposed of according to the local laws, by authorized Companies.
- 5) Check the filter element part number on the filter label or in the ordering and option chart.
Use only original spare parts.
- 6) Lubricate the new element o-ring gasket (3) with oil.
- 7) Insert the clean element into its seat with care.
- 8) Check the bowl o-ring condition (4) and lubricate with oil.
If damaged, check the seal kit part number in the spare seal kit table.
N.B. The anti-extrusion o-ring (5) must be positioned downwards (under the gasket).
- 9) Screw the bowl (1) until it stops, with a tightening torque of 70 Nm + 5/0.

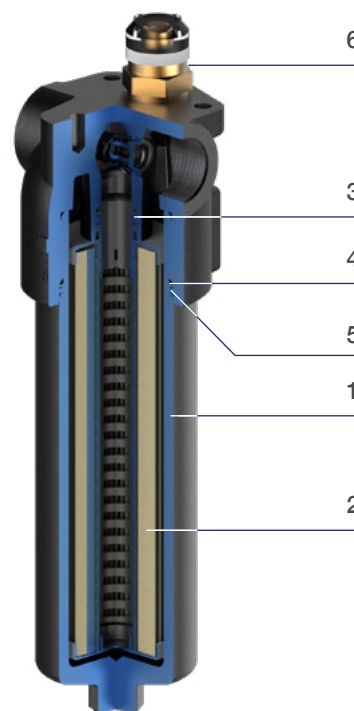

Accessories:

Clogging indicator (6).


If damaged, unscrew and replace it (check the part number in the ordering and option chart).

Lubricate the o-ring gasket with oil and tighten until it stops, with a tightening torque of 40 Nm +5/0.

PRESSURE DROP CURVES (Δp)



The “Assembly Pressure Drop (Δp)” is obtained by adding the pressure drop values of the Filter Housing and of the Clean Filter Element corresponding to the considered Flow Rate and it must be

lower than 120 kPa (1,2 bar). In any case this value should never exceed 1/3 of the bypass valve setting.

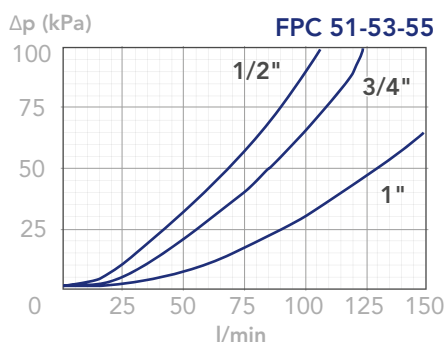


CLEAN FILTER ELEMENT PRESSURE DROP

(depending both on the internal diameter of the element and on the filter media)

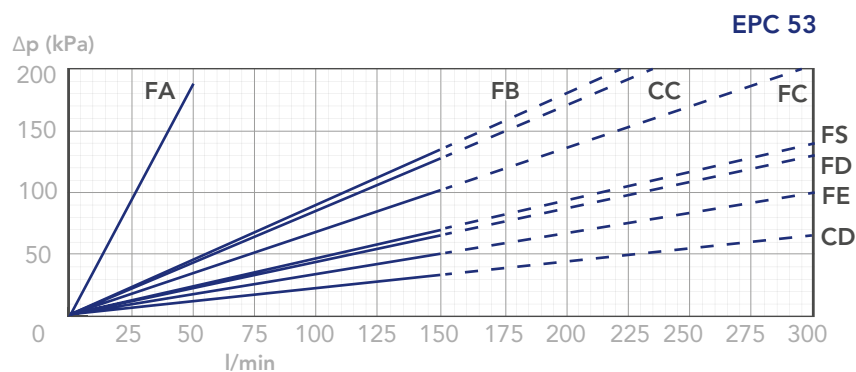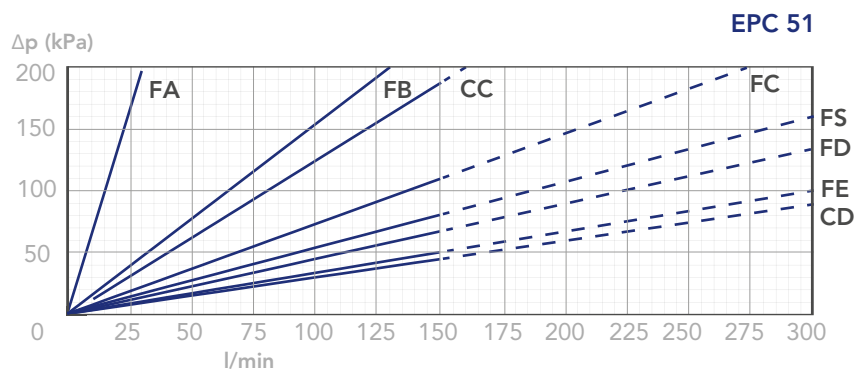


FPC

PRESSURE FILTERS

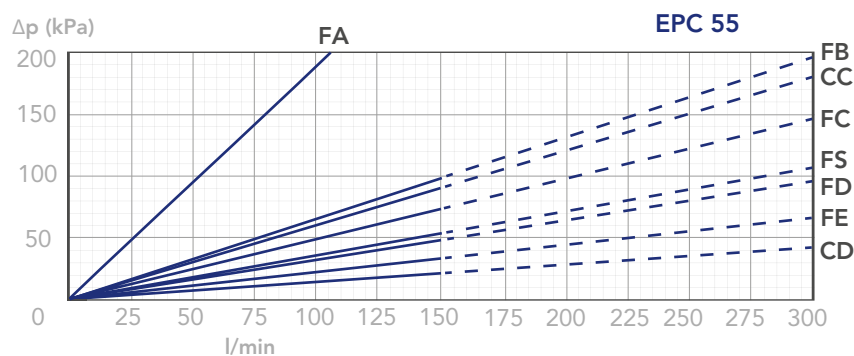

BYPASS VALVE PRESSURE DROP

When selecting the filter size, these curves must be taken into account if it is foreseen that any flow peak is to be absorbed by the bypass valve, it also must be of proper configuration to avoid pressure peaks. The valve pressure drop is directly proportional to fluid specific gravity.

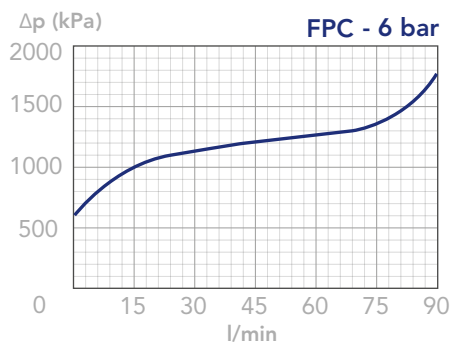

N.B.

All the curves have been obtained with mineral oil having a kinematic viscosity 30 cSt and specific gravity 0,86 kg/dm³; for fluids with different features, please consider the factors described in the first part of this catalogue. All the curves are

obtained from test done at the UFI FILTERS HYDRAULICS Laboratory, according to the specification ISO 3968:2005. In case of discrepancy, please check the contamination level, viscosity and features of the fluid in use.